

Zerk Installation Guide

Thank you for your purchase from the Silverthin™ slewing ring bearing product line - your business is appreciated!

Before installation please note the following:

Silverthin™ slewing rings are lubricated with a minimal amount of lithium-based high pressure grease to protect them in transit. A proper grease and fill amount should be determined for the specific application the bearing is intended for before installation.

Your slewing ring may be shipped with the grease zerks uninstalled. Those zerks will be included with your shipment and will need to be installed before installation into the application. Typically, you will only find that the zerks on the outer faces of the bearings will need to be installed; this is to protect them from damage during shipment and storage.

To install, screw the provided zerks into the predrilled and tapped lubrication holes clockwise until finger tight, then using the appropriately sized wrench, tighten the zerk a quarter turn clockwise.

If you have any questions or concerns about your order, please feel free to contact us at sales@silverthin.com or toll free at (866)294-5841.


Best Regards,
The Silverthin Bearing Group




1. Standard grease zerks:



2. Predrilled and tapped lubrication hole:

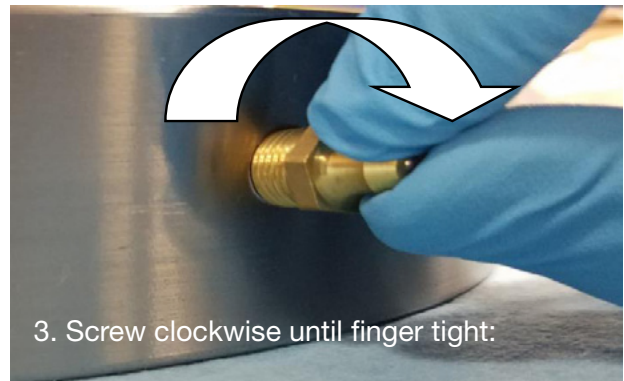

3. Screw clockwise until finger tight:

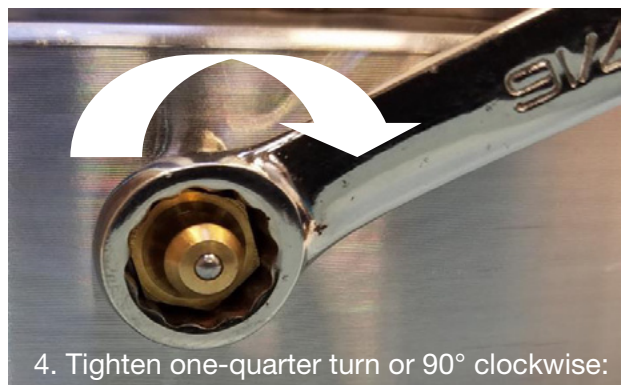

4. Tighten one-quarter turn or 90° clockwise: